



The Play / Pause feature is offered exclusively on the Motion Controller handheld remote and is applicable to Route and Anchor GPS Modes ONLY. Pausing Route or Anchor mode stops the motor and puts system into Manual mode allowing you to steer around obstacles or net a fish and then resume (Play) the previous mode.

Using PLAY / PAUSE in Route mode

How to Use

1. At any point during an active Route press
2. You may now use any of the manual controls, Vector, Heading Lock, or Anchor.
3. Press the center Prop button to get back to Manual mode.
4. To resume your Route press
5. Your boat will resume your Route from the next closest route point.

Using PLAY / PAUSE in Anchor mode

How to Use

1. While in anchor mode press
2. You may now use any of the manual controls, Vector or Heading Lock.
3. Press the center Prop button to get back to Manual mode.
4. To go back to your anchor point press
5. Your boat will now return to your anchor point and re-engage anchor.



Fishing Scenario

You are running a Route along a shoreline and find a school of fish. You decide that you would like to stop and anchor in that location and make a few casts. You catch a fish while anchored here and while fighting the fish you need to leave the anchor spot to chase it down. While chasing the fish you use the Heading Lock mode to keep your boat on a straight trajectory. Upon landing the fish you want to return to your anchor spot to make a few more casts. After completing a few more casts in this anchor location you decide to continue following your original route down the shoreline.

Advanced Play / Pause Steps:

While running your route along the shoreline, to pause your route press . To anchor at the school of fish and make a few casts press . To leave the anchor spot first press , then you can use manual controls to chase down a hooked fish. Press to use Heading Lock mode to keep your boat on a straight trajectory while chasing down the fish. After landing the fish, to return to your anchor spot, first press to return to manual mode, then press to return to your anchor point. After completing a few casts, first press to return to manual mode then press to return to your original route.