 
UPGRADE FIRMWARE

 
Go to the Main Menu in the

ProNav App






















% THRUST



DISCONNECTED

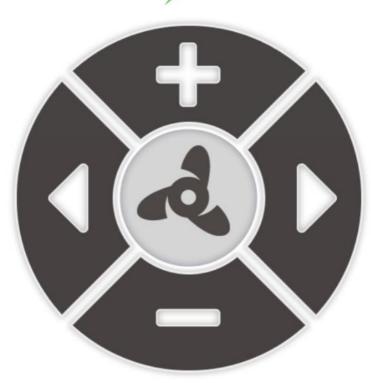









CONNECT










Press "Upgrade Firmware"

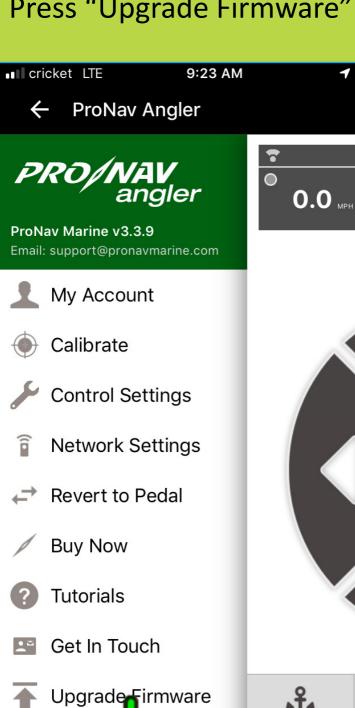

Unit D

Disconnec



SET TO:

THRUST

 
CONNECT

96% □

Connect

DIS

Press "ProNav GPS Unit"





ProNav Angler

Choose Which Device You Would Like To Upgrade

PRONAV REMOTE

- or -

PRONAV BLUETOOTH

- or -

PRONAV GPS UNIT

Watch the firmware update instructional video then confirm that you have watched it.

cricket LTE

⊕
 √ 61%
 □



← ProNav Angler

ProNav Firmware Updater

Please watch the firmware update instructional video prior to updating your firmware.

Note: Once you start the upgrade process you must complete the upgrade for the ProNav to work

 


 
I have watched the video and unit will not be usable

Next Step

Press "Next Step"

cricket LTE





ProNav Firmware Updater

Please watch the firmware update instructional video prior to updating your firmware.

Note: Once you start the upgrade process you must complete the upgrade for the ProNav to work



I have watched the video and understand the proceess, I must finish the upgrade or my unit will not be usable



Disconnect your ProNav GPS Unit from your control unit then replug it back in

1:52 PM

■II cricket LTE

← ProNav Angler

60% (III)

 
Please completely power off and power back on the ProNav Angler, once finished you have 45 seconds to complete the next step

ProNav Firmware Updater



Next Step

Press "Next Step"



ProNav Firmware Updater

Please completely power off and power back on the ProNav Angler, once finished you have 45 seconds to complete the next step





Press "Connect to the ProNav Angler"

cricket LTE

1:52 PM

60% <u></u>




← ProNav Angler

ProNav Firmware Updater


Connect to the ProNav Angler using the button below. Make sure this has been done within 45 seconds of rerestart the unit again before proceeding

CONNECT TO THE PRONAV ANGLER

above, then wait for the diam device to turn of

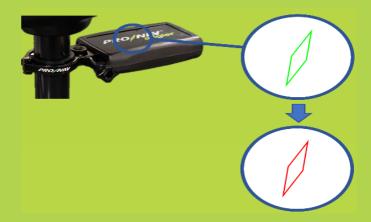


 Select your device from the list of devices



ProNav Firmware Updater

Connect to the ProNav Angler using the button below. Make sure this has been done within 45 seconds of re-

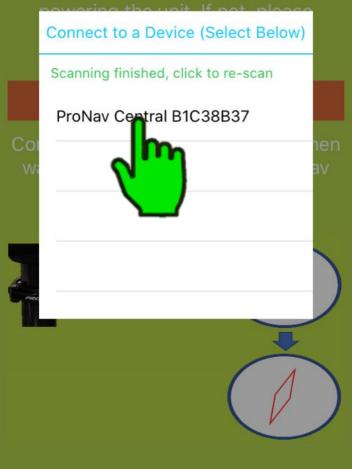


Watch the light on the top of your GPS unit. Once it turns red press "Light is red, Continue"

cricket LTE

12:32 PM

 ● **1** 64%
■



ProNav Firmware Updater

Connect to the ProNav Angler using the button below. Make sure this has been done within 45 seconds of repowering the unit. If not, please restart the unit again before proceeding

Connecting to the Device

The light on the ProNav Unit will turn green and then red. Please wait until the light turns red on the ProNav Unit, if it does not turn red please restart the process...

 


Press "If diamond is red, click to continue"

■■ cricket LTE

12:32 PM






ProNav Firmware Updater

the button below. Make sure this has been done within 45 seconds of repowering the unit. If not, please restart the unit again before proceeding


CONNECT TO THE PRONAV ANGLER

Connect using the button above, then wait for the diamond on the ProNav device to turn greed, then red.

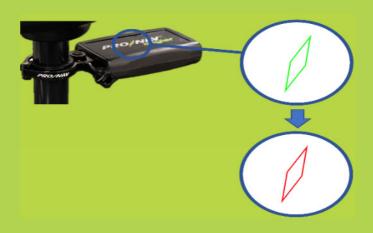

IF DIAMOND IS REIO CLICK TO CONTINUE

 Press "Start Upgrade"



ProNav Firmware Updater



 
Once the upgrade is complete press "Go to Home Screen" and follow the instructions in the popup box.

cricket LTE

12:46 PM



● 1 64% □



ProNav Firmware Updater

99.97% Complete

Update Complete Disconnect and reconnect your GPS Unit before continuing. Close and restart the app at this time and you can begin using it

Go to Home Screen

